This copy may be copied for maintenance of Richter play equipment. Page 1 Instructions for wear The equipment must be checked for correct Proof of operation and safety, especially the points maintenance checks of play equipment Magnifying lens Playground..... 1. Ensure that the lens moves smoothly. Date of installation Check that the lens sits firmly in the fixture. Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static Acrylic glass/Makrolon equipment at least once a year. Clean with commercially available Intervals for maintenance work and checks dishwashing liquid or, better still, plastic generally depend on cleaner (www.burnus.de); under no circumstances use spirits or turpentine! - the location - the usage Stainless steel - the frequency of use - possible vandalism Clean with stainless steel spray (www.kim-tec.de) using a clean cloth. For more details see also "General instructions for maintenance of Structural stability playgrounds". Check anchoring to the ground every **Magnifying Lens** 12 months. Order No. 10.32000 info@ludocrea.ch 675 03 Special notes, e.g. for repairs 4 +4] Giswil 5 Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action

GMBH

All work carried out, everything is in order

Maintenance carried out by:

FAX