

# Instructions for wear checks of play equipment

The equipment must be checked for correct operation and safety, especially the points listed below:

Proof of maintenance

**Playground**.....

**Date of installation** .....


Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.

Intervals for maintenance work and checks generally depend on

- the location
- the usage
- the frequency of use
- possible vandalism

For more details see also "General instructions for maintenance of playgrounds".

**Stone Xylophone**  
**Order No. 10.46000**

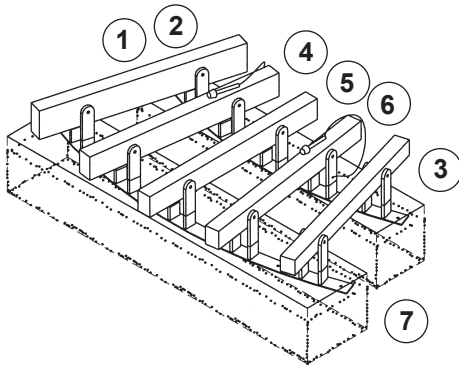

## Connection

1. Check that all bolts and screws are tight and retighten if necessary.

## Stones

2. Clean with standard glass cleaner, washing-up liquid or with soap and water using a sponge.

## Metal

3. Clean with plastic cleaner (www.burnus.de) using a clean cloth.

## Beaters

4. Check for wear and tear, replace if necessary.
5. Check that beaters are securely connected.
6. If necessary, disentangle suspension cables; if a beater is missing (vandalism) install a replacement beater.

## Structural stability

7. Check anchoring to the ground once a year.








Special notes, e.g. for repairs

Repair not carried out, it is still possible to play on equipment

Repair not carried out, equipment is taken out of action


All work carried out, everything is in order

Maintenance carried out by:

For spare parts refer to back of page.

..... Date .....

**Spare Parts**  
**Stone Xylophone**  
**Order No. 10.46000**

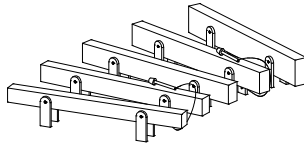

Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

**Order No. Spare part**

10.99905 beater, complete

