For spare parts refer to back of page.

Page 1 The equipment must be checked for Instructions for wear Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground..... 1. Check for rot and, if necessary, smooth out Date of installation splinters and round off sharp edges of cracks. Checks depend on the type of equipment. Check all bolts and screws are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment at least once a year. Recommendation: apply wood preservative wax (www.complex-farben.eu) once a year. Intervals for maintenance work and checks generally depend on Gong - the location - the usage Check that the gong is properly connected. - the frequency of use - possible vandalism Clean with water and soap using a sponge. For more details see also "General **Beater** instructions for maintenance of playgrounds". Check for wear and tear, replace if necessary. Check that the beater is properly connected. Gong Order No. 10.52160/10.52180 If necessary, disentangle suspension cable; info@ludocrea.ch if the beater is missing (vandalism) install a replacement beater. Structural stability In order to check that the equipment is securely fastened to the ground, uncover the foundations once a year. 67 675 03 Special notes, e.g. for repairs 4 +4] Giswil Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action .udoCrea.ch GmbH All work carried out, everything is in order Maintenance carried out by:

..... Date

Spare Parts Gong Order No. 10.52160/10.52180



Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

			paras.	
Order No.	Spare part	up		
	· · · · · · · · · · · · · · · · · · ·			
10.99906	beater, complete			
٦				
Ţ				