Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground..... 1. Check for rot and, if necessary, smooth out Date of installation splinters and round off sharp edges of cracks. Checks depend on the type of equipment. Check that all wood connections are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment at least once a year. **Recommendation:** apply paraffin wax to the upper end grain areas once a year, please Intervals for maintenance work and checks generally depend on refer to order No. 0.90100, 1 litre. - the location Swing suspension - the usage - the frequency of use 4. Check that ropes, chains and seats are - possible vandalism securely connected or linked. Retighten the bolts of the suspension frame, if required. For more details see also "General instructions for maintenance of Check that swivels move smoothly, re-grease playgrounds". if necessary. **Partner Swing** Check ropes and chains for wear and tear, replace if necessary. Order No. 10.92000 info@ludocrea.ch Swing 7. Check for vandalism, replace if metal parts are exposed. Structural stability 8. Uncover the foundation once a year in order to check for rot or the steel feet for corrosion. 67 675 03 Special notes, e.g. for repairs 4 +4] Giswil Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action .udoCrea.ch GmbH All work carried out, everything is in order Maintenance carried out by: For spare parts refer to back of page.

Spare Parts
Partner Swing
Order No. 10.92000



Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

0.93060

rubber swing seat with chains for adults



10.99922 connecting rope 5 m (1 pair)

