## This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground..... Check for rot and, if necessary, smooth out Date of installation ..... splinters and round off sharp edges of cracks. Checks depend on the type of equipment. 2. Check that all bolts and screws are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment at least once a year. **Recommendation**: apply wood preservative wax (www.complex-farben.eu) once a year. Intervals for maintenance work and checks generally depend on Stainless steel - the location 4. Clean with stainless steel spray - the usage (www.kim-tec.de) using a clean cloth. - the frequency of use - possible vandalism Structural stability For more details see also "General 5. In order to check for rot at wooden parts, instructions for maintenance of uncover the foundations once a year. playgrounds". **Arm Game** info@ludocrea.ch Order No. 11.01400 675 03 Special notes, e.g. for repairs 4 +4] Giswil Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action .udoCrea.ch GmbH All work carried out,

everything is in order

Maintenance carried out by:

...... Date ......