This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Stainless steel Playground..... 1. Clean with stainless steel spray using a clean Date of installation cloth. Checks depend on the type of equipment. **Bow** Any equipment with moving parts must be checked at least twice a year, static Check for proper operation. equipment at least once a year. Structural stability Intervals for maintenance work and checks generally depend on 3. In order to check the fixation to the ground or for corrosion, uncover the foundations once - the location a year. - the usage - the frequency of use - possible vandalism For more details see also "General instructions for maintenance of playgrounds". info@ludocrea.ch **Turning Bow** Order No. 11.02100 1 675 03 Special notes, e.g. for repairs 4 +4] Giswil Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action .udoCrea.ch GmbH All work carried out,

everything is in order

Maintenance carried out by:

...... Date