This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground..... 1. Check for rot and, if necessary, smooth out Date of installation splinters and round off sharp edges of cracks. Checks depend on the type of equipment. Check that all bolts and screws are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment at least once a year. **Recommendation**: apply paraffin wax to the upper end grain areas once a year, please Intervals for maintenance work and checks generally depend on refer to order No. 0.90100, 1 litre. - the location Structural stability - the usage - the frequency of use 4. Uncover the foundations once a year in order - possible vandalism to check for corrosion. For more details see also "General 5. Check surfacing material; if the layer is too instructions for maintenance of thin, refill with wood chips or the like. playgrounds". **Balancing Path** info@ludocrea.ch Order No. 11.50203 675 03 Special notes, e.g. for repairs 4 +4] Giswil Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action .udoCrea.ch GmbH All work carried out, everything is in order Maintenance carried out by:

..... Date