Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground..... 1. Check for rot and, if necessary, smooth out Date of installation splinters and round off sharp edges of cracks. Checks depend on the type of equipment. 2. Check that all bolts and screws are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment equipment at least once a year. 3. Check the ash wood rungs of the ladders for wear and tear, the remaining diameter must Intervals for maintenance work and checks generally depend on be at least 30 mm. 4. Recommendation: apply paraffin wax to the - the location upper end grain areas once a year, please - the usage refer to order No. 0.90100, 1 litre. - the frequency of use - possible vandalism Structural stability For more details see also "General instructions for maintenance of In order to check the steel feet for corrosion, playgrounds". uncover the foundations once a year. Platform Hut with Roof Climbing rope (if applicable) Order No. 3.13300 info@ludocrea.ch 6. Check for wear and tear, if the steel reinforcement is damaged it is imperative it be replaced. 7. Check that the rope is securely connected to the ground. 4 67 675 03 Special notes, e.g. for repairs 4 +4] Giswil Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action .udoCrea.ch GmbH All work carried out, everything is in order Maintenance carried out by: Date