## This copy may be copied for maintenance of Richter play equipment. Page 1 Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground..... 1. Check for rot and, if necessary, smooth out Date of installation ..... splinters and round off sharp edges of cracks. Checks depend on the type of equipment. Check all bolts and screws are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment at least once a year. 3. Check the ash wood rungs of the ladder for wear and tear, the remaining diameter must Intervals for maintenance work and checks generally depend on: be at least 30 mm. 4. Recommendation: apply paraffin wax to the - the location upper end grain areas once a year, please - the usage refer to Order No. 0.90100, 1 litre. - the frequency of use - possible vandalism Firemen's pole For more details see also "General instructions for maintenance of Check that bolts and screws are tight and playgrounds". retighten if necessary. **Look-out Tower** Structural stability Order No. 3.21500 info@ludocrea.ch 6. In order to check the steel feet for corrosion, uncover the foundation once a year. 675 03 Special notes, e.g. for repairs 4 +4] Giswil Repair not carried out, It is still possible to play on equipment Repair not carried out, Equipment is taken out of action .udoCrea.ch GmbH All work carried out, everything is in order Maintenance carried out by:

...... Date ......