This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground..... 1. Check for rot and, if necessary, smooth out Date of installation splinters and round off sharp edges of cracks. Checks depend on the type of equipment. 2. Check that all bolts and screws are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment equipment at least once a year. Intervals for maintenance work and checks generally depend on - the location - the usage - the frequency of use - possible vandalism For more details see also "General instructions for maintenance of playgrounds". **Roof for Plattforms and Building Sites** info@ludocrea.ch Order No. 3.26800/3.26803 Roof for Plattforms and **Building Sites** for headroom Order No. 3.26900/3.26903 675 03 Special notes, e.g. for repairs 4 +4] Giswil