Instructions for wear The equipment must be checked for **Proof of** correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground 1. Check for rot and, if necessary, smooth out Date of installation splinters and round off sharp edges of cracks. Checks depend on the type of equipment. Check that all bolts and screws are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment at least once a year. Recommendation: apply paraffin wax to the upper end grain areas once a year, please Intervals for maintenance work and checks generally depend on refer ot Order No. 0.90100, 1 litre. Structural stability - location - kind of use In order to check for rot at wooden parts - frequency of use or steel feet for corrosion, uncover the - possible vandalism foundation once a year. For more details see also "General instructions for maintenance of playgrounds". Bridge with wooden handrail Order No. 3.66310/3.66335/3.66345/ info@ludocrea.ch 3.66425 675 03 Special notes, e.g. for repairs 4 +4] Giswil Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action .udoCrea.ch GmbH All work carried out, everything is in order Maintenance carried out by: Date