This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially checks of play equipment maintenance the points listed below: Wooden parts Playground 1. Check for rot and, if necessary, smooth Date of installation splinters and round off sharp edges of cracks. Checks depend on the type of equipment. Check all bolts and screws are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment at least once a year. Recommendation: Apply paraffin wax to the upper end grain areas once a year, please Intervals for maintenance work and checks generally depend on refer to Order No. 0.90100, 1 litre. Structural stability - location - kind of use 4. In order to check steel bracing for corrosion, - frequency of use uncover the foundation once a year. - possible vandalism For more details see also "General instructions for maintenance of playgrounds". info@ludocrea.ch Support Frame for Rope Bridge to Small Tower Order No. 3.66603 675 03 Special notes, e. g. for repairs 4 +4] Giswil Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action .udoCrea.ch GmbH All work carried out, everything is in order

Maintenance carried out by:

..... Date