

The equipment must be checked for correct operation and safety, especially the points listed below:

Proof of maintenance

Slide surface

1. Check for vandalism.

2. Check that the bolts and screws on the base equipment are tight and retighten if necessary.

Structural stability


3. In order to check the stability of the foundations or the steel feet for corrosion, uncover the foundations once a year.

Concrete Slide

width 0.50 m

Order No. 3.70122 height 1.00 m


Order No. 3.70124 height 1.50 m

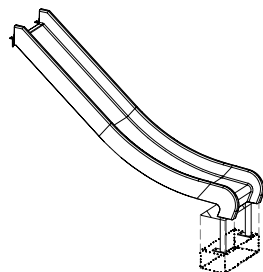

Concrete Slide

width 1.00 m

Order No. 3.70138 height 2.00

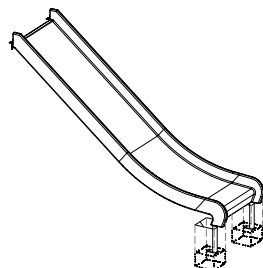

**Repair not carried out,
it is still possible to play on equipment**

**Repair not carried out,
equipment is taken out of action**

**All work carried out,
everything is in order**

Maintenance carried out by:

..... Date

Special notes, e.g. for repairs