This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for correct operation and safety, especially Proof of maintenance checks of play equipment the points listed below: Wooden parts Playground..... 1. Check for rot and, if necessary, smooth out Date of installation splinters and round off sharp edges of cracks. Checks depend on the type of equipment. Check that all bolts and screws are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment at least once a year. Check hand grips and footrests for tight fit. Intervals for maintenance work and checks generally depend on If required, touch up or renew the paintwork using a solvent-free acrylic paint. - location **Recommendation**: apply paraffin wax to the - usage upper end grain areas once a year, please - frequency of use refer to Order No. 0.90100, 1 litre. - possible vandalism For more details see also "General Rocking mechanism instructions for maintenance of playgrounds". Check for smooth operation, check the action of the rubber buffers in the interior of the fish. If the body of the fish does not stop Little Fish smoothly, replace the rubber buffers. To do Order No. 4.08110 this, dismantle the layers of the fish body one info@ludocrea.ch after another on the marked side. Structural stability 7. Examine the foundation by rocking the equipment once a year. 7

67 675 03 Special notes, e.g. for repairs 4 +4] Giswil Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action .udoCrea.ch GmbH All work carried out, everything is in order Maintenance carried out by: Date