Instructions for wear checks of play equipment	The equipment must be checked for correct operation and safety, especially the points listed below:	Proof of maintenance
Playground	Wooden parts	
Date of installation	 Check for rot and, if necessary, smooth out splinters and round off sharp edges of cracks. 	
Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.	Check that all bolts and screws are tight and retighten if necessary.	
Intervals for maintenance work and checks generally depend on	3. Recommendation: apply paraffin wax to the upper end grain areas once a year, please refer to Order No. 0.90100, 1 litre.	
locationkind of usefrequency of use	 Check the ash wood rungs of the ladder for wear and tear, the remaining diameter must be at least 30 mm. 	
- possible vandalism	Inclined Climbing Net	
For more details see also "General instructions for maintenance of playgrounds".	 Check that connection points are tight and retighten if necessary. 	
Platform House Order No. 4.14904	6. Check the climbing net for wear and tear, if the steel reinforcement is damaged it is imperative it be replaced.	
(3)	Slide	
	7. Check the slide surface for vandalism.	
10 6 2	8. Check that all screws and bolts are tight, retighten if necessary.	<u></u>
	Structural stability	
9	 In order to check for rot at wooden parts or steel feet for corrosion, uncover the foundations once a year. 	
	 Net: check the connection (tensioning hook) to the anchoring chain, if necessary re- tension the net at the bottom ends. 	Special notes, e.g. for repairs
		Speci
	Repair not carried out, it is still possible to play on equipment	
	Repair not carried out, equipment is taken out of action	
	All work carried out, everything is in order	
Maintenance carried out by:		
Date		