Instructions for wear checks of play equipment Playground

The equipment must be checked for correct operation and safety, especially points listed below:

Proof of maintenance

Wooden parts

Date of installation


Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.

Intervals for maintenance work and checks generally depend on

- location
- kind of use
- frequency of use
- possible vandalism

For more details see also "General instructions for maintenance of playgrounds".

Cat Order No. 4.24210

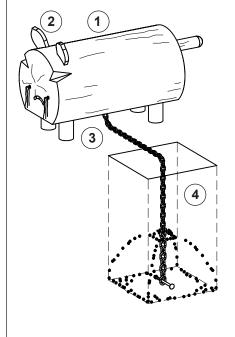

1.	Check for rot and, if necessary, smooth out
	splinters and round off sharp edges of cracks.

- Recommendation: apply paraffin wax to the upper end grain areas once a year, please refer to Order No. 0.90100, 1 litre.
 - Chain
- Check for wear.

Structural stability

4. Check anchoring of the chain to the ground.

		g. for repairs	41 41 675 03 67 — info@ludocrea.ch
		Special notes, e.g. for repairs	wil +41
		Spi	 Gis\
Repair not carried out, it is still possible to play on equipment			6074 Giswil
Repair not carried out, equipment is taken out of action			_
All work carried out, everything is in order			LudoCrea.ch GmbH
Maintenance carried out by:	1	 	
Date			