This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground 1. Check for rot and, if necessary, smooth out Date of installation splinters and round off sharp edges of cracks. Checks depend on the type of equipment. **Holding ropes** Any equipment with moving parts must be checked at least twice a year, static Ensure that ropes are securely connected. equipment at least once a year. Replace if necessary. Intervals for maintenance work and checks Rubber buffer generally depend on Check for wear and tear, replace if necessary. - location - kind of use Structural stability - frequency of use - possible vandalism 4. Examine the structural stability once a year by rocking the equipment. For more details see also "General instructions for maintenance of playgrounds". **Wobbly Sheep** Order No. 4.24270 info@ludocrea.ch 1 675 03 Special notes, e.g. for repairs 4 +4] Giswil Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action .udoCrea.ch GmbH All work carried out, everything is in order

Maintenance carried out by:

...... Date

Wobbly Sheep Order No. 4.24270



Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

		parts.
Order No.	Spare part	
0.00407	Factor Walth to Ohaan	
0.92197	Ear for Wobbly Sheep	
	m m	