Instructions for wear checks of play equipment	The equipment must be checked for correct operation and safety, especially the points listed below:		Proof of maintenance	
Playground	Wooden parts			
Date of installation	 Check for rot and, if necessary, smooth out splinters and round off sharp edges and 			
Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.	 cracks. Recommendation: apply paraffin wax to the upper end grain areas once a year, please refer to order No. 0.90100, 1 litre. 			
Intervals for maintenance work and checks generally depend on	Structural stability			
 location usage frequency of use possible vandalism 	 Examine the structural stability once a year by rocking the equipment. 			
For more details see also "General instructions for maintenance of playgrounds".				
Wobbly Wild Boar static version Order No. 4.24276				
(1) (2)				
			e.g. for repairs	
			Special notes, e.g.	
and the start of t	Repair not carried out, it is still possible to play on equipment			
	Repair not carried out, equipment is taken out of action			
	All work carried out, everything is in order			
	Maintenance carried out by:			
	Date			