Instructions for wear checks of play equipment	The equipment must be checked for correct operation and safety, especially the points listed below:	Proof of maintenance
Playground	Wooden parts	
Date of installation	<ol> <li>Check for rot and, if necessary, smooth out splinters and round off sharp edges and cracks.</li> </ol>	
Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.	<ol> <li>Check that the drawing board is securely connected to the wall and retighten bolts/ screws if necessary.</li> </ol>	
Intervals for maintenance work and checks generally depend on - the location - the usage - the frequency of use	<b>3. Recommendation:</b> apply paraffin wax to the upper end grain area once a year, please refer to order No. 0.90100, 1 litre.	
<ul> <li>possible vandalism</li> <li>For more details see also "General instructions for maintenance of playgrounds".</li> </ul>		
Drawing Board for wall attachment Order No. 4.24460		e.g. for repairs
		Special notes, e.g. f
	Repair not carried out, it is still possible to play on equipment	
	Repair not carried out, equipment is taken out of action	
	All work carried out, everything is in order	
	Maintenance carried out by:	
	Date	