## Instructions for wear Proof of The equipment must be checked for maintenance correct operation and safety, especially checks of play equipment the points listed below: Wooden parts Playground ..... 1. Check for rot and, if necessary, smooth out Date of installation ..... splinters and round off sharp edges of cracks. Checks depend on the type of equipment. 2. Check all bolts and screws are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment at least once a year. If required, touch up or renew the paintwork using a solvent-free acrylic paint. Intervals for maintenance work and checks generally depend on **Recommendation:** Apply paraffin wax to the upper end grain areas once a year, please - location refer to order No. 0.90100, 1 litre. - kind of use - frequency of use 5. Check the ash wood rungs of the ladders for - possible vandalism wear and tear, the remaining diameter must be at least 30 mm. For more details see also "General instructions for maintenance of 6. Check that all climbing grips are tight and playgrounds". retighten if necessary; replace if worn. Climbing net Fish Berta Order No. 4.90010 info@ludocrea.ch 7. Check that connection points are tight and retighten if necessary. 8. Check the net for wear and tear, if the steel reinforcement is damaged it is imperative it be replaced. Slide Check the slide surface for vandalism. 675 03 10. Check that the bolts and screws on the Special notes, e.g. for repairs platform are tight and retighten if necessary. 4 Structural stability +4] 11. In order to check the steel feet for corrosion, uncover the foundation once a year. If necessary re-tension the net at the bottom ends, check the connections to the anchoring Giswil chain. 6074 Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action udoCrea.ch GmbH All work carried out, everything is in order Maintenance carried out by: ...... Date ......