## This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground ..... 1. Check for rot and, if necessary, smooth out Date of installation ..... splinters and round off sharp edges of cracks. Checks depend on the type of equipment. Check that all bolts and screws are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment at least once a year. Recommendation: apply paraffin wax to the upper end grain areas once a year, please Intervals for maintenance work and checks generally depend on refer to Order No. 0.90100, 1 litre. Operation - location - kind of use Check all functional parts and retighten - frequency of use screws and bolts, if necessary. - possible vandalism Bearings and chains For more details see also "General instructions for maintenance of Make sure that bearings and chains move playgrounds". smoothly and check for wear and tear. **Small Building Site** Sand container Order No. 5.09300 info@ludocrea.ch Check for wear and tear. Structural stability 7. In order to check the steel feet for corrosion, uncover the foundation once a year. 67 675 03

Special notes, e.g. for repairs 4 +4] Giswil Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action .udoCrea.ch GmbH All work carried out, everything is in order Maintenance carried out by: ..... Date ......