

The equipment must be checked for correct operation and safety, especially the points listed below:

Proof of maintenance

Wooden parts

1. Check for rot and, if necessary, smooth out splinters and round off sharp edges of cracks.
2. Check that all bolts and screws are tight and retighten if necessary.
3. Check steps for wear and tear: at least 2/3 of the material should be left, replace if necessary.

Structural stability

4. In order to check steel feet for corrosion, uncover the foundations once a year.

- ### Single equipment


Please pay attention to the **separate maintenance notes** of the following single equipment:

Mill Wheel

Order No.
5.15813

Crank Handle Pump 5.17637

Note: Please check that all documents are included!

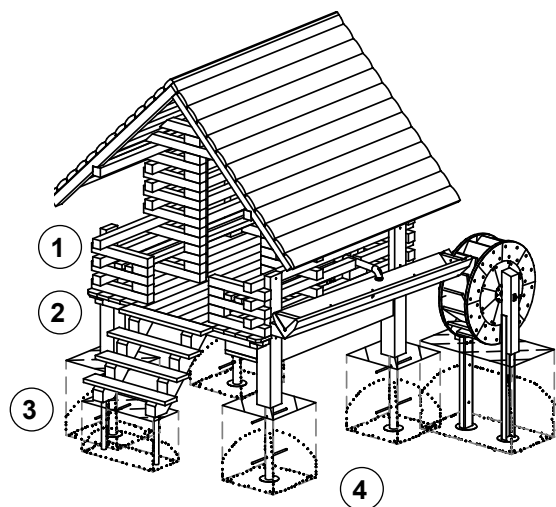

Special notes, e.g. for repairs

**Repair not carried out,
it is still possible to play on equipment**

**Repair not carried out,
equipment is taken out of action**

**All work carried out,
everything is in order**

Maintenance carried out by:

..... **Date**

For spare parts refer to next page.

Spare parts
Mill House
Order No. 5.09700

Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

Order No. Spare parts

0.30031 Roof cladding, larch



Please indicate the covering surface!

99.01398 Stand post, larch

