Instructions for wear checks of play equipment	The equipment must be checked for correct operation and safety, especially the points listed below:	Proof of maintenance
Playground	Operation	
Date of installation	 Make sure the pump mechanism moves smoothly. 	
Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static	Intake container	
equipment at least once a year. Intervals for maintenance work and checks generally depend on	Check water hoses for wear and tear; replace if necessary. To do this, loosen lid bolts and remove upper part including pump mechanism.	
locationusagefrequency of use	 Check the float valve for leakage, clean reservoir if necessary. 	
- possible vandalism	Cleaning the jet	
For more details see also "General instructions for maintenance of playgrounds".	 Use a screwdriver to screw off the jet (spraying head), loosen the connecting hose, clean the jet (pipe cleaners are most suitable), re-connect and screw on. 	
Splash Pump	Structural stability	
with fixed water jet Order No. 5.18050	 Check anchoring to the ground every 12 months, retighten screws and bolts if necessary. 	
with mushroom head Order No. 5.18060	Note Prior to the start of the frost period, turn off water supply, remove the splash pump and drain the intake container. Open the drainage bolt inside the reservoir to do this. If the splash pump has been removed, you may close the opening using a winter lid.	77 2
Intake Container Order No. 5.18052		Special notes, e.g. for repairs
Foundation Anchor	Repair not carried out, it is still possible to play on equipment	D 277A
Order No. 5.18054	Repair not carried out, equipment is taken out of action	
	All work carried out, everything is in order	
	Maintenance carried out by:	
	Date	