

The equipment must be checked for correct operation and safety, especially the points listed below:

Proof of maintenance


Spray Head

1. Screw out brass nozzle insert using a 10-mm Allen key.
2. Pierce blocked drill holes using a graver or a similarly pointed object and remove all small grains of sand.
3. Before screwing on the insert again, thoroughly rinse the spraying head pipe by pumping for a good period of time.
4. Screw on the nozzle insert again. Avoid damaging the O-ring in the process.

Recommendation: Lubricate the O-ring with valve grease.

- location
- usage
- frequency of use
- possible vandalism

Simple Spray Head
Order No. 5.18232 / 5.18870 /
5.18871 / 5.18872 / 5.18873

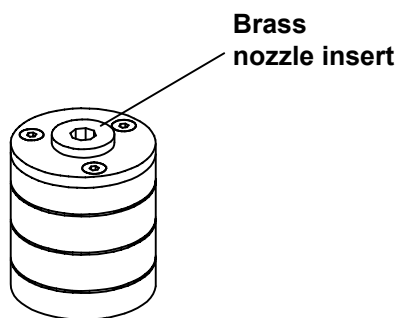

**Repair not carried out,
it is still possible to play on equipment**

**Repair not carried out,
equipment is taken out of action**

**All work carried out,
everything is in order**

Maintenance carried out by:

..... **Date**

Special notes, e.g. for repairs