

**The equipment must be checked for correct operation and safety, especially the points listed below:**

### Proof of maintenance

## Lubrication


1. The plastic piston needs to be regularly lubricated with special fitting grease. The intervals will depend on how intensively the equipment is used. To do so, the moveable stand cylinder must be lifted using the supplied metal handles. Carefully push them along the cylinder, past the cover seal, into the concrete housing and hook onto the bottom edge. Lift up the stand cylinder a little bit at first and unscrew the lock nut. Then remove the whole cylinder. Attention: Do not put your hand under the lower edge – danger of getting squashed!

## Disassembly

2. The equipment must be disassembled during sub-zero conditions as follows:
  - a. Disconnect from the water mains and disassemble the stand cylinder as described in point 1.
  - b. Remove the summer lid.
  - c. Loosen the hose connector on the jet connection and drain the jet line.
  - d. Loosen the plastic nuts on the base.
  - e. Loosen the hose connector of the water reservoir connection.
  - f. Loosen the screw connections of the water reservoir.
  - g. Take out the equipment and water reservoir.
  - h. Remove sand deposits from the trap as well as from the bottom of the concrete housing.
  - i. Replace the trap (pin must point upward).
  - j. Close the concrete housing with the winter lid.

**For more details see also our general instructions for maintenance of playgrounds!**

**Water Hopper**  
for external Sprayhead  
**Order No. 5.25070**

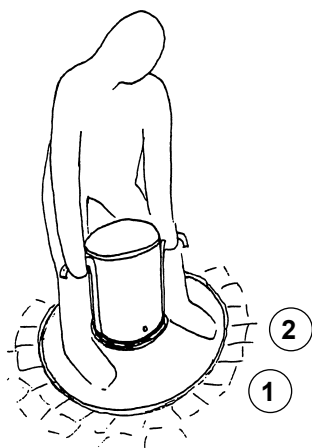

Special notes, e.g. for repairs

## Repair not carried out, it is still possible to play on equipment

**Repair not carried out,  
equipment is taken out of action**

**All work carried out,  
everything is in order**

**Maintenance carried out by:**

..... Date .....