
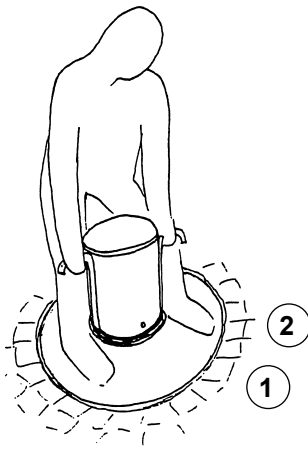 


<h1>Instructions for wear checks of play equipment</h1>		<p>The equipment must be checked for correct operation and safety, especially the points listed below:</p>		<p>Proof of maintenance</p>	
<p>Playground.....</p> <p>Date of installation</p> <p>Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.</p> <p>Intervals for maintenance work and checks generally depend on</p> <ul style="list-style-type: none"> - location - usage - frequency of use - possible vandalism <p>For more details see also our general instructions for maintenance of playgrounds!</p> <p>Water Hopper for external Sprayhead Order No. 5.25070</p> 		<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> Lubrication </div> <p>1. The plastic piston needs to be regularly lubricated with special fitting grease. The intervals will depend on how intensively the equipment is used. To do so, the moveable stand cylinder must be lifted using the supplied metal handles. Carefully push them along the cylinder, past the cover seal, into the concrete housing and hook onto the bottom edge. Lift up the stand cylinder a little bit at first and unscrew the lock nut. Then remove the whole cylinder. Attention: Do not put your hand under the lower edge – danger of getting squashed!</p> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> Disassembly </div> <p>2. The equipment must be disassembled during sub-zero conditions as follows:</p> <ol style="list-style-type: none"> Disconnect from the water mains and disassemble the stand cylinder as described in point 1. Remove the summer lid. Loosen the hose connector on the jet connection and drain the jet line. Loosen the plastic nuts on the base. Loosen the hose connector of the water reservoir connection. Loosen the screw connections of the water reservoir. Take out the equipment and water reservoir. Remove sand deposits from the trap as well as from the bottom of the concrete housing. Replace the trap (pin must point upward). Close the concrete housing with the winter lid. 		<div style="display: flex; align-items: center;"> <input style="width: 30px; height: 30px; margin-right: 10px;" type="checkbox"/> <div style="flex-grow: 1;"> <div style="border: 1px solid black; height: 100px; margin-bottom: 10px;"></div> <div style="border: 1px solid black; height: 100px;"></div> </div> <div style="writing-mode: vertical-rl; transform: rotate(180deg); font-size: small; margin-left: 5px;"> Special notes, e.g. for repairs </div> </div>	
		<p>Repair not carried out, it is still possible to play on equipment</p>		<input style="width: 30px; height: 30px;" type="checkbox"/>	
		<p>Repair not carried out, equipment is taken out of action</p>		<input style="width: 30px; height: 30px;" type="checkbox"/>	
		<p>All work carried out, everything is in order</p>		<input style="width: 30px; height: 30px;" type="checkbox"/>	
		<p>Maintenance carried out by:</p> <p>..... Date</p>			
<p>For spare parts refer to next page.</p>					

Spare parts
Water Hopper
Order No. 5.25070

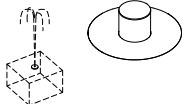

Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

Order No. Spare parts

0.97840

Winter lid

