

The equipment must be checked for correct operation and safety, especially the points listed below:

Proof of maintenance

Joints

1. Check the main joint (for turning the seat) and the joint of the claw arm for smooth operation as well as for wear and tear (replace brass bush if worn down by 50 %).

Lubrication

2. If necessary, lubricated with suitable grease (universal grease)


- ### Excavator bucket

Seat

4. Check condition of seat surface, smooth if necessary.

Location

5. Check that foundation chain is fastened properly and check if equipment has moved (**must not be within the safety distances of other equipment**).

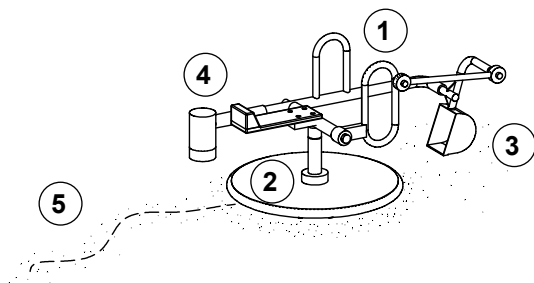

Special notes, e.g. for repairs

Repair not carried out, it is still possible to play on equipment

 
**Repair not carried out,
equipment is taken out of action**

**All work carried out,
everything is in order**

Maintenance carried out by:

..... **Date**

Spare parts
Small Excavator
Order No. 5.32000



Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

Order No. Spare parts

0.88170 Set of brass bushes



99.00670 Seat

