Instructions for wear checks of play equipment		The equipment must be checked for correct operation and safety, especially the points listed below:		Proof of maintenance	
Playground		Wooden parts			
Date of installation	1.	Check for rot and, if necessary, smooth out splinters and round off sharp edges of cracks.			
Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.	2.	Check that all bolts and screws are tight and retighten if necessary; grind/cut off protruding bolt ends, regalvanise with zinc spray.			
Intervals for maintenance work and checks		Swing suspension			
generally depend on	3.	Make sure that the joints move smoothly.			
<ul><li>location</li><li>kind of use</li><li>frequency of use</li></ul>	4.	Make sure that the swivels move smoothly, apply grease if required.			
- possible vandalism	5.	Check welds of metal cross beam for cracks.			
For more details see also "General instructions for maintenance of playgrounds".  Multi-surface Twin Swing special	6.	Check chain and connection to chain; the first chain link must be locked firmly in the swivel; check wear on contact surfaces between first and second chain link.			
Order No. 6.12820/6.12825		Swing seat			
2 4 5 6 2	7. 8.	Replace if metal parts are exposed.  Check the seats for a ground clearance of 40 cm.			
	9.	In order to check the steel feet for corrosion, uncover the foundations once a year.			
8 140 cm 9				Special notes, e.g. for repairs	
		Repair not carried out, it is still possible to play on equipment  Repair not carried out, equipment is taken out of action			
4 6					
		All work carried out, everything is in order			
	Ма	intenance carried out by:	-1	1	
or spare parts refer to back of page.		Date .			

Spare Parts Multi-surface Twin Swing special Order No. 6.12820/6.12825



Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

	U		
Order No.	Spare part	Order No.	Spare part
0.93000	rubber swing seat	0.93090	U-shackle with swivel
0.93010	rubber swing seat with 4 eyebolts	0.88150	brass bush for swing joint
0.93020	rubber swing seat with 2 V-chains	0.20010	stainless steel machine bolt M8x55 with locking nut
0.93021	V-chain	0.20020	stainless steel machine bolt M8x28 with locking nut
0.93115	rubber swing seat with chains	0.93080	Cradle Seat with chains
0.93102	chains (pair) 6 mm	0.93081	Cradle Seat without chains
	length 1.85 m	0.93103	Pair of chains 6mm, for Cradle Seat
		-000000000	0000000000