

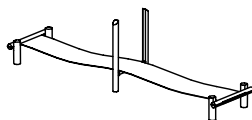
### Proof of maintenance

**Special notes, e.g. for repairs**

 

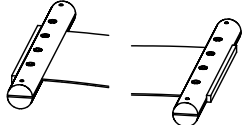

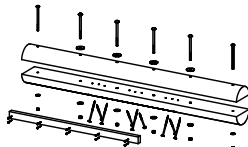
## Spare Parts

### Belt Path

Order No. 6.64711



Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

Order No. Spare part	Order No. Spare part
<p><b>0.92280</b> ball bearing</p>  <p><b>0.92890</b> roller without bearing</p>  <p><b>0.92911</b> belt, length 8.0 m, width 0.80 m with cross beams, without fastening material</p> <p>Please specify longitudinal distance between the outer edges of the stand posts.</p>  <p><b>0.92915</b> repair set for belt</p> <p><b>99.01275</b> stand post for middle frame without fittings</p> 	<p><b>99.01468</b> Middle frame with roller</p> <p><b>99.00541</b> cross beam, cut into halves, pre-drilled with liner and Spax screws incl. screws, width 0.80 m</p> 

#### Note

This list includes only the spare parts ordered most frequently. Other spare parts on request.