Instructions for wear checks of play equipment	The equipment must be checked for correct operation and safety, especially the points listed below:	Proof of maintenance
Playground	Wooden parts	
Date of installation	Check for rot and, if necessary, smooth out splinters and round off sharp edges of cracks.	
be checked at least twice a year, static equipment at least once a year. Intervals for maintenance work and checks	 Check that all wood connections are tight and retighten if necessary. Shorten protruding threads if any and re-galvanise using gal- vanising spray. 	
generally depend on	Swing suspension	
- location - usage	3. Make sure that the joints move smoothly.	
- frequency of use - possible vandalism	Make sure that the swivels move smoothly, apply grease if required.	
For more details see also our general instructions for maintenance of	5. Check welds of metal cross beam for cracks.	
playgrounds! Extra High Twin Swing special	6. Check chain and connection to chain, the first chain link must be locked; check wear on contact surfaces between first and second chain link.	
Order No. 7.14020 / K7.14020	Swing seats	
	7. Replace if metal parts are exposed.	
	8. Check the swing seats for a ground clearance of 55 cm.	
	Structural stability	
	Inordertochecksteelfeetforcorrosion,uncover the foundations once a year.	e.g. for repairs
* 8		Special notes,
	Repair not carried out, it is still possible to play on equipment	
	Repair not carried out, equipment is taken out of action	
	All work carried out, everything is in order	
	Maintenance carried out by:	
For spare parts refer to next page.		

Spare parts Extra High Twin Swing special Order No. 7.14020 / K7.14020 Order No. Spare parts		Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to only use original parts .	
0.93050	Rubber swing seat for adults		
0.93060	Rubber swing seat with chains for adults		
0.87100	Pair of chains, 6 mm length 3.80 m		