The equipment must be checked for Instructions for wear Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Structural stability Playground..... 1. Uncover the foundations once a year in order to Date of installation check the structural stability as follows: - steel for corrosion Checks depend on the type of equipment. - anchoring to the ground for stability Any equipment with moving parts must - condition of concrete foundations be checked at least twice a year, static equipment at least once a year. 2. Check all bolts; retighten if necessary. Intervals for maintenance work and checks Wood generally depend on 3. Check for rot and, if necessary, smooth out splinters and round off sharp edges & cracks. - location - usage Carefully check stability of laminated beam by - frequency of use pricking it with pointed, thin steel. - possible vandalism 5. Recommendation: apply paraffin wax to the end For more details see also "General grain areas once a year, especially near the instructions for maintenance of ground; refer to order No. 0.90100, 1 litre. playgrounds". Metal/fittings Check that universal joint moves smoothly in both **Tractor Tyre Swing** directions. info@ludocrea.ch Order No. 7.45000 Check that the ball bearing rotates freely; regrease every 12 months. Check chain suspension at the universal joint and at the tyre; first link of each chain must be locked. Check chains: only a maximum of 1/3 of the material can be worn away; replace if necess. 10. Check safety cables; cable eye stiffeners must move freely. 67 9 675 03 Rubber Special notes, e.g. for repairs 11. Check tyres for wear and tear as well as for 4 vandalism; replace if required. +4] 12. Replace fender profile (impact protection) if half of the material has been worn down. Giswil 6074 Check tyre for ground Repair not carried out, clearance of 40 cm. it is still possible to play on equipment Repair not carried out, equipment is taken out of action .udoCrea.ch GmbH All work carried out, everything is in order Maintenance carried out by: For spare parts refer to back of page. Date

Spare partsTractor Tyre Swing Order No. 7.45000



Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to

only use original parts.

Order No.	Spare part	Order No.	Spare part
0.93300	universal joint	0.93430	A-frame without fixing bolt, with steel feet
0.93310		0.93431	A-frame without fixing bolt, pre-drilled for existing steel feet
0.93320	safety cable for universal joint		
0.93551	forked bolt for chain fastening	0.93470	fender profile for laminated beam
0.20020	stainless steel machine bolt	0.93480	fixing bolt
0.93500	tyre with floor and 4 chains	99.01254	stand post, pre-drilled with steel foot
0.93510	tyre with floor without chains		
99.01274	floor Ø 60 cm, milled	99.01210	stand post, pre-drilled for steel foot
0.93520	chain		
0.93400	anchoring iron for laminated beam	99.00600	cross beam for A-frame
0.93420	laminated beam with fender profile		