Instructions for wear checks of play equipment	The equipment must be checked for correct operation and safety, especially the points listed below:	Proof of maintenance
Playground	Wooden parts	
Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.  Intervals for maintenance work and checks generally depend on  - location - usage - frequency of use - possible vandalism  For more details see also our general	1. Check for rot and, if necessary, smooth out splinters and round off sharp edges of cracks.  2. Recommendation: apply paraffin wax to the upper end grain areas once a year, please refer to Order No. 0.90100, 1 litre.  Climbing grips  3. Check for wear and tear, replace if necessary.  Structural stability  4. In order to check for rot at wooden parts and steel feet for corrosion, uncover the	
Climbing Wall with 2 elements Order No. 7.77010 height 1.90 m Order No. 7.77011 height 3.00 m	foundations once a year.	Special notes, e.g. for repairs
	Repair not carried out, it is still possible to play on equipment	ğ g
	Repair not carried out, equipment is taken out of action	
	All work carried out, everything is in order	
	Maintenance carried out by:	
For spare parts refer to next page.	Date	

Spare par Climbing W Order No. 7	rts /all /.77010 / 7.77011	Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to <b>only use original parts</b> .
Order No.	Spare parts	
0.56000	Climbing grip	