

 
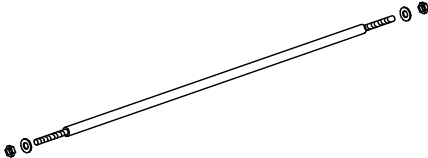
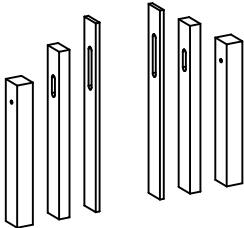
Proof of maintenance

- Uncover the foundations once a year in order to check the load-bearing parts for corrosion.

Special notes, e.g. for repairs

Maintenance carried out by:

..... Date

<div><div><div>Spare Parts</div><div>Lifting Equipment</div><div>Order No. 7.89700</div></div><div></div><div><div>Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to only use original parts.</div></div></div>	
Order No.	Spare part
<div><div><div>0.98150</div><div>weight bar</div><div></div></div><div><div>99.00220</div><div>weights (without weight bar)</div><div></div></div></div>	