This copy may be copied for maintenance of Richter play	equi	inent.		page '	
Instructions for wear checks of play equipment	The equipment must be checked for correct operation and safety, especially the points listed below:			Proof of maintenance	
Playground		Wooden parts			
Date of installation	1.	Check for rot and, if necessary, smooth out splinters and round off sharp edges of cracks.			
Checks depend on the kind of equipment. Any equipment with moving parts must be checked at least twice a year, static equip- ment at least once a year.	2.	Check that all bolts and screws are tight and retighten if necessary.			
Intervals for maintenance work and checks generally depend on:		Check steering wheel of function and firm seated, retighten if necessary.			
locationkind of use	4.	Recommendation : apply paraffin wax to the upper end grain areas once a year, please refer to Order No. 0.90100, 1 litre.			
 frequency of use possible vandalism For more details see also "General 	5.	Check the ash wood rungs of the ladder for wear and tear, the remaining diameter must be at least 30 mm.			
instructions for maintenance of playgrounds".		Structural stability			
Small Twin-Masted Ship Order No. 8.02030	6.	In order to check for rot at wooden parts and steel feet for corrosion, uncover the foundations once a year.			5
		Combination equipment			
	7.	maintenance notes of the following combination equipment:Inclined Climbing Net3.69160Mast with FlagL7.68100Suspension Bridge3.66090Small Round Table4.10520		g. for repairs):	<u> 11 675 03 67info@II.Idocrea.ch</u>
		Note Please check that all documents are included!		Special notes (e. g.	Cicva/il + 41
		pair not carried out, s still possible to play on equipment			4074 C
		pair not carried out, uipment ist taken out of action			
		work carried out, erything is in order			
	Maintenance carried out by		I		
		Date			