This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground..... 1. Check for rot and, if necessary, smooth out Date of installation splinters and round off sharp edges of cracks. Checks depend on the type of equipment. Check that all bolts and screws are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment equipment at least once a year. Climbing ladders and net tunnel Intervals for maintenance work and checks generally depend on 3. Check ropes for wear and tear, if the steel reinforcement is damaged, it is imperative - the location they be replaced. - the usage - the frequency of use 4. Check connection to wood, if necessary - possible vandalism retighten screws/bolts. For more details see also "General Metal parts and fittings instructions for maintenance of playgrounds". 5. File down any sharp edges that may arise from wear and tear. **Mountain Guard** 6. Check chains for wear and tear. Order No. 8.79000 info@ludocrea.ch Plastic parts Replace parts that are worn excessively or damaged. Structural stability Uncover the foundation once a year in order 67 to check for rot or the steel feet for corrosion.

675 03 Special notes, e.g. for repairs 4 +4] Giswil Repair not carried out, 8 it is still possible to play on equipment Repair not carried out, equipment is taken out of action .udoCrea.ch GmbH All work carried out, everything is in order Maintenance carried out by: Date