## Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground..... 1. Check for rot and, if necessary, smooth out Date of installation ..... splinters and round off sharp edges of cracks. Checks depend on the type of equipment. 2. Check all bolts and screws are tight and Any equipment with moving parts must retighten if necessary, retighten if necessary be checked at least twice a year, static equipment at least once a year. Recommendation: apply paraffin wax to the 3. upper end grain areas once a year, please Intervals for maintenance work and checks generally depend on refer to order No. 0.90100, 1 litre. 4. Check the ash wood rungs of the ladders for - the location wear and tear, the remaining diameter must - the usage be at least 30 mm. - the frequency of use - possible vandalism Slide For more details see also "General instructions for maintenance of Check the slide surface for vandalism. 5. playgrounds". Check that the bolts and screws on the 6 platform are tight and retighten if necessary. **Elephant with Trunk Slide** Order No. 8.99210 Structural stability info@ludocrea.ch 3 7. Uncover the foundation once a year in order to check for rot or corrosion. 6 2 67 675 03 5 Special notes, e.g. for repairs 4 +4 Giswil 6074 ( Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action .udoCrea.ch GmbH All work carried out, everything is in order Maintenance carried out by: ..... Date .....