# Instructions for wear checks of play equipment

The equipment must be checked for correct operation and safety, especially the points listed below:

Proof of maintenance

# Playground.....

#### Date of installation .....


Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.

Intervals for maintenance work and checks generally depend on

- the location
- the usage
- the frequency of use
- possible vandalism

For more details see also "General instructions for maintenance of playgrounds".

Dance Chimes Order No. 9.06000/9.06102/9.06106

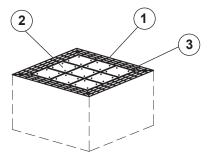

### Cleaning

- In order to clean the inside remove the step grates and remove leaves or dirt (if necessary, use big suction machine).
- 2. If necessary, you can clean the inside of the individual sound elements by removing the respective floor plate.
- 3. Check that screws/bolts are tight and retighten if necessary.

## Operation

 If the equipment is worn heavily, send in for general overhaul. Please ask for costs if required.

repair
for
e.g.
Special notes, e.g. for repair
pecial
S

info@ludocrea.ch

675 03

Giswil

.udoCrea.ch GmbH

Rep	air n	ot carrie	d o	ut,			
it is	still	possible	to	play	on	equipme	n

Repair not carried	out,
equipment is taken	out of action

All work ca	ırri	ed	out,
everything	is	in	orde

Maintenance	carried	out	by:
Maintenance	carried	out	by:

	Data
-	Date
	Date