This copy may be copied for maintenance of Nichter pla	y equipment.	
Instructions for wear checks of play equipment	The equipment must be checked for correct operation and safety, especially the points listed below:	Proof of maintenance
Playground	Stainless steel	
Date of installation	Clean with stainless steel spray (www.kim-tec.de) using a clean cloth.	
Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.	Playing surface	
	Clean recesses in the playing surface and openings for water drainage. If necessary,	
Intervals for maintenance work and checks generally depend on	remove the playfield (loosen 4 screws on the underside).	
- location	Structural stability	
usagefrequency of usepossible vandalism	Check the anchoring to the ground once a year.	
For more details see also our general instructions for maintenance of playgrounds!		
Catch me if you can - Table (with non-removable playing pieces) Order No. 9.11010		
Chess Table (without playing pieces) Order No. 9.12010		
Nine Men's Morris Table (with non-removable playing pieces) Order No. 9.14010		epairs
		Special notes, e.g. for repairs
	Repair not carried out, it is still possible to play on equipment	
3	Repair not carried out, equipment is taken out of action	
	All work carried out, everything is in order	
	Maintenance carried out by:	
**da+ 6-4 -	Date	