Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Playground equipment Playground..... 1. Check that wooden tiles are in sound Date of installation condition and move smoothly. Checks depend on the type of equipment. 2. If they don't move smoothly, adjust the Any equipment with moving parts must vertical distance. To do this, loosen the be checked at least twice a year, static locking bolts on the back of the sleeves and equipment equipment at least once a year. push upward a bit (start at the top). Intervals for maintenance work and checks generally depend on 3. Check that all bolts are tight and retighten if necessary. - the location Stainless steel - the usage - the frequency of use - possible vandalism 4. Clean with stainless steel spray (www.kim-tec.de) using a clean cloth. For more details see also "General instructions for maintenance of Structural stability playgrounds". 5. In order to check the fixation to the ground, uncover the foundation once a year. **Pairs** Order No. 9.15200 info@ludocrea.ch 675 03 Special notes, e.g. for repairs 4 +4] Giswil 3 Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action .udoCrea.ch GmbH All work carried out, everything is in order locking bolt Maintenance carried out by: Date