Instructions for wear checks of play equipment	The equipment must be checked for correct operation and safety, especially the points listed below:	Proof of maintenance
Playground	Wooden parts	
Date of installation	 Check for rot and, if necessary, smooth out splinters and round off sharp edges of 	
Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.	cracks.2. Check that all bolts and screws are tight and retighten if necessary.	
Intervals for maintenance work and checks generally depend on	3. Check steps for wear and tear: at least 2/3 of the material should be left, replace if necessary.	
- location - usage	Structural stability	
frequency of usepossible vandalism	 In order to check steel feet for corrosion, uncover the foundations once a year. 	
For more details see also our general instructions for maintenance of playgrounds!		
Large Timber House on Stilts Order No. L4.10400 Order No. L4.10410 with door		
		Special notes, e.g. for repairs
	Repair not carried out, it is still possible to play on equipment	
	Repair not carried out, equipment is taken out of action	
	All work carried out, everything is in order	
	Maintenance carried out by:	
For spare parts refer to back of page.	Date	

info@ludocrea.ch

6074 Giswil

LudoCrea.ch GmbH

RICHTER SPIELGERÄTE GMBH D-83112 FRASDORF PHONE +49-8052/17980 FAX 4180 • • •

Page 2

Spare parts Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out Large Timber House on Stilts repairs it is helpful to only use original parts. Order No. L4.10400/L4.10410 Order No. Spare parts 0.30031 Roof cladding, larch ĪŢ I Please indicate the covering surface! 99.01398 Stand post, larch