

### Proof of maintenance

The diagram illustrates a simple beam balance. It consists of a horizontal beam (1) supported by a central pivot point (2). Two vertical rods (3) are attached to the ends of the beam, each passing through a square base (4). The bases are shown with dashed lines to indicate their internal structure, including a central vertical rod and horizontal crossbars.

4. In order to check steel feet for corrosion, uncover the foundations once a year.

**Special notes, e.g. for repairs**

**Maintenance carried out by:**

..... **Date** .....

<div><div>Spare Parts Horizontal Bar Order No. L6.96080</div><div>Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to <b>only use original parts.</b></div></div>	
Order No.	Spare part
0.98060	horizontal bar, length 1.20 m
	