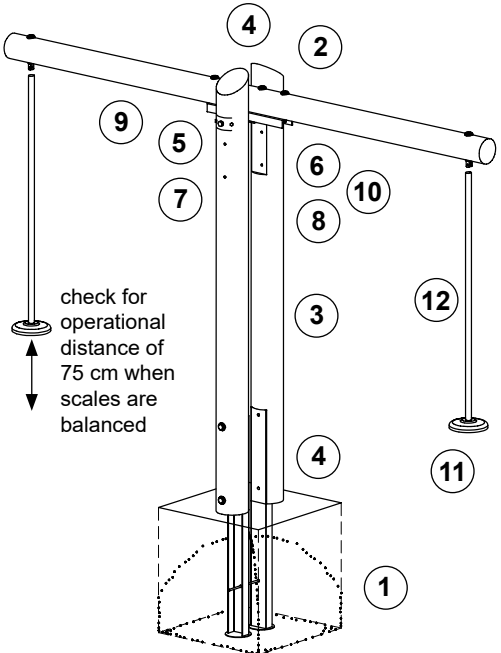


Instructions for wear checks of play equipment	The equipment must be checked for correct operation and safety, especially the points listed below:	Proof of maintenance
<p><b>Playground .....</b></p> <p><b>Date of installation .....</b></p> <p>Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.</p> <p>Intervals for maintenance work and checks generally depend on</p> <ul style="list-style-type: none"> <li>- location</li> <li>- kind of use</li> <li>- frequency of use</li> <li>- possible vandalism</li> </ul> <p><b>For more details see also "General instructions for maintenance of playgrounds".</b></p> <p><b>Scales</b> <b>Order No. L6.10000</b></p>  <p>check for operational distance of 75 cm when scales are balanced</p>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"><b>Wooden parts</b></div> <ol style="list-style-type: none"> <li>1. Check for rot and, if necessary, smooth out splinters and round off sharp of cracks. <input type="checkbox"/></li> <li>2. Check that all bolts and screws are tight and retighten if necessary. <input type="checkbox"/></li> <li>3. <b>Recommendation:</b> apply paraffin wax to the upper end grain areas once a year, please refer to Order No. 0.90100, 1litre. <input type="checkbox"/></li> </ol> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"><b>Scale mechanism</b></div> <ol style="list-style-type: none"> <li>4. Replace rubber buffer if worn down to less than 8 cm of original material height (new 10 cm). <input type="checkbox"/></li> <li>5. Check connection to wood for stability. <input type="checkbox"/></li> <li>6. Grease main bearing at the top of the scale (lubrication nipple). <input type="checkbox"/></li> </ol> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"><b>Pendulum seat suspension</b></div> <ol style="list-style-type: none"> <li>7. Check that joint can move smoothly in both directions. <input type="checkbox"/></li> <li>8. Check connection to wood, bearing plate must fit closely. <input type="checkbox"/></li> <li>9. Check chain and connection to chain; The first chain link must be locked; check wear on contact surfaces between first and second chain link. <input type="checkbox"/></li> </ol> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"><b>Pendulum seat/hose sleeve</b></div> <ol style="list-style-type: none"> <li>10. Replace pendulum seat if metal parts are exposed. <input type="checkbox"/></li> <li>11. Check hose sleeve fixation, replace hose sleeve, if damaged. <input type="checkbox"/></li> </ol> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"><b>Structural stability</b></div> <ol style="list-style-type: none"> <li>12. In order to check for rot at wooden parts or steel feet for corrosion, uncover the foundation once a year. <input type="checkbox"/></li> </ol> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"><b>Repair not carried out, it is still possible to play on equipment</b></div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"><b>Repair not carried out, equipment is taken out of action</b></div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"><b>All work carried out, everything is in order</b></div> <p><b>Maintenance carried out by:</b> .....</p> <p><b>Date</b> .....</p>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"><b>Special notes, e.g. for repairs</b></div>
<p><b>For spare parts refer to back of page.</b></p>		

## Additional notes

### Maintenance of one post equipment

This product is a one post equipment according to EN 1176-1.

Equipment of this kind requires special diligence with regard to planning, construction and maintenance.

In this document, you will find additional maintenance notes.

#### **The following principles generally apply to one post equipment:**

The longer the equipment has been in operation, the more diligence is required during maintenance.

Dynamic loads additionally stress the structural stability.

Frequency of use and a given excessive load must be taken into account when scheduling maintenance.

The goal of any inspection must be to ensure that the equipment can be safely used until the next check is due.

It is important to pay attention to the following special aspects for safe operation of one post equipment during regular inspections:

- Check the structural stability **twice a year**, uncover the foundations to do this
- Examine the earth/air zone of stand posts with extra care
- Measures for ensuring structural stability of load-bearing wooden components
  - knocking test: the clearer the sound the “healthier” the wood
  - hammer and nail test: the clearer the sound becomes as the nail is hammered in deeper and deeper, the “healthier” the wood
  - incremental drill test (spot-related information): provides very reliable information on the “internal” condition of the cross-section of the wood in one spot by enabling the person conducting the test to visually check the specimen, rub it between their fingers and smell on it
  - resistograph (spot-related information): very good information on the internal solidity of the wood, however, only experienced experts are able to interpret the measurement graphs
  - tensile test: load test resulting in highly relevant safety-related information (see separate instructions)

#### **Permadrur system as an additional measure for strengthening the structural stability**

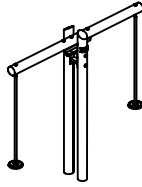
Wooden stand posts protected by the Permadrur system (i.e. the part buried in the ground is protected by a black heat-shrink tube and metal foil) are checked in almost the same manner.

A 500 g hammer with a polyamide head (soft-faced hammer) is used to tap the post. Thus, the heat-shrink tube will not be damaged.













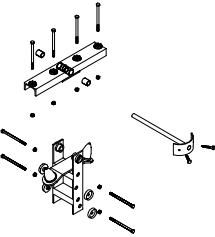

If the post is checked by determining the drill resistance (e. g. resistograph), drilling through the heat-shrink tube and metal foil is possible. However, the drill hole must be sealed with a dowel afterwards.

## Scales

### Order No. L6.10000



Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

Order No. Spare part	Order No. Spare part
<b>0.92330</b> joint for pendulum seat 	<b>0.88110</b> brass bush for axle Ø 25 mm 
<b>0.94000</b> pendulum seat with suspension 	<b>0.20010</b> stainless steel machine bolt with locking nut 
<b>0.94140</b> hose sleeve 	<b>0.20020</b> stainless steel machine bolt with locking nut 
<b>0.92405</b> chain for hose sleeve length 1.60 m 	<b>0.88190</b> square bar steel with 2 brass bushes 
<b>0.94110</b> pendulum seat without disc 	<b>0.94021</b> double fork 
<b>0.94120</b> disc for pendulum seat 	<b>99.01340</b> stand post made of larch with steel foot 
<b>0.94200</b> mechanism, complete 	<b>99.00010</b> cross beam machined and drilled 
<b>0.94010</b> parabolic buffer spring (rubber buffer) 