

Kontrollnachweis

7

7

5

5

-
- A schematic diagram of a vertical probe assembly. The assembly consists of a base plate (3) mounted on a surface, a long vertical shaft (2) extending upwards from the base, and a probe head (1) at the top. The probe head has a small circular feature (4) on its side. The entire assembly is shown within a dashed rectangular box, indicating its position relative to a surface.

Platz für besondere Vermerke, z. B. für Reparaturen

7

11

7

..... Datum


Einfüllen der Aromaöle

Hinweis


Nachfüllen erst, wenn man das Empfinden hat, dass das Duftöl sich verflüchtigt.
Die Dosierung der Aromaöle sollte sehr vorsichtig erfolgen, um Belästigungen durch zu intensive Düfte/Gerüche zu vermeiden. Wir empfehlen eine Menge von 2 - 5 Tropfen.

Nachbefüllung

1. Deckel anheben und innere Mutter M8 lösen.
2. Deckel abziehen.
3. Wattepad bei Bedarf erneuern.
4. Einige Tropfen des Duftöls durch die obere äußere Bohrung auf den Wattepad geben.
5. Deckel wieder aufstecken und Mutter anschrauben.

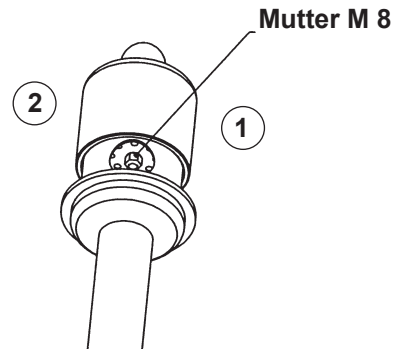

Bohrungen für Aromaöle

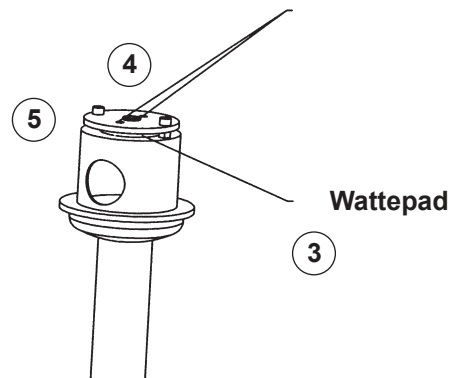

Aromaöle

Stele Nr. 1

(niedrigste/innerste Duftstele):
Rosenholz

Stele Nr. 2:
Pfefferminze

Stele Nr. 3:
Salbei

Stele Nr. 4:
Zimt

Stele Nr. 5:
Zitrone

Stele Nr. 6:
Nelke

Stele Nr. 7:
Anis

Stele Nr. 8:
Birkenteer

Stele Nr. 9
(höchste/äußerste Duftstele):
Bittermandel

Höhe der Stelen

Stele Nr.	Höhe (cm)
1	90
2	95
3	100
4	105
5	110
6	115
7	120
8	125
9	130

