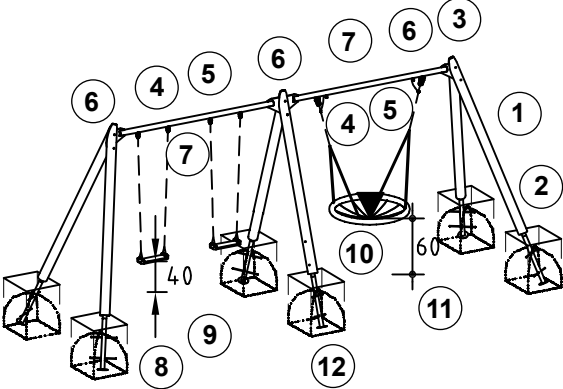
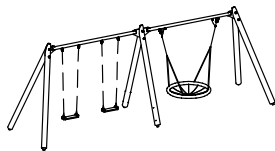


Instructions for wear checks of play equipment	The equipment must be checked for correct operation and safety, especially the points listed below:	Proof of maintenance
<p>Playground</p> <p>Date of installation</p> <p>Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.</p> <p>Intervals for maintenance work and checks generally depend on</p> <ul style="list-style-type: none"> - location - kind of use - frequency of use - possible vandalism <p>For more details see also "General instructions for maintenance of playgrounds".</p> <p>Big Triple Swing special Order No. 6.18020</p>  <p>Swing suspension</p> <ol style="list-style-type: none"> 1. Check for rot and, if necessary, smooth out splinters and round off sharp edges of cracks. 2. Check that all bolts and screws are tight and retighten if necessary; grind/cut off protruding bolt ends, regalanise with zinc spray. 3. Recommendation: apply paraffin wax to the end grain areas once a year, especially near the ground; please refer to order No. 0.90100, 1 litre. 4. Make sure that the joints move smoothly. 5. Make sure that the swivels move smoothly, apply grease if required. 6. Check welds of metal cross beam for cracks. 7. Check chain and connection to chain; the first chain link must be locked firmly in the swivel; check wear on contact surfaces between first and second chain link. <p>Swing seat</p> <ol style="list-style-type: none"> 8. Replace if metal parts are exposed. 9. Check the seats for a ground clearance of 40 cm. <p>Stork nest</p> <ol style="list-style-type: none"> 10. Check for damage and for wear and tear, replace if necessary. 11. Check the height (top edge = 60 cm) of the stork's nest. <p>Structural stability</p> <ol style="list-style-type: none"> 12. In order to check the steel feet for corrosion, uncover the foundations once a year. <p>Repair not carried out, it is still possible to play on equipment</p> <p>Repair not carried out, equipment is taken out of action</p> <p>All work carried out, everything is in order</p> <p>Maintenance carried out by:</p> <p>For spare parts refer to back of page.</p>	<p>Wooden parts</p> <ol style="list-style-type: none"> 1. Check for rot and, if necessary, smooth out splinters and round off sharp edges of cracks. 2. Check that all bolts and screws are tight and retighten if necessary; grind/cut off protruding bolt ends, regalanise with zinc spray. 3. Recommendation: apply paraffin wax to the end grain areas once a year, especially near the ground; please refer to order No. 0.90100, 1 litre. <p>Swing suspension</p> <ol style="list-style-type: none"> 4. Make sure that the joints move smoothly. 5. Make sure that the swivels move smoothly, apply grease if required. 6. Check welds of metal cross beam for cracks. 7. Check chain and connection to chain; the first chain link must be locked firmly in the swivel; check wear on contact surfaces between first and second chain link. <p>Swing seat</p> <ol style="list-style-type: none"> 8. Replace if metal parts are exposed. 9. Check the seats for a ground clearance of 40 cm. <p>Stork nest</p> <ol style="list-style-type: none"> 10. Check for damage and for wear and tear, replace if necessary. 11. Check the height (top edge = 60 cm) of the stork's nest. <p>Structural stability</p> <ol style="list-style-type: none"> 12. In order to check the steel feet for corrosion, uncover the foundations once a year. <p>Repair not carried out, it is still possible to play on equipment</p> <p>Repair not carried out, equipment is taken out of action</p> <p>All work carried out, everything is in order</p> <p>Maintenance carried out by:</p> <p>For spare parts refer to back of page.</p>	<p>Proof of maintenance</p> <p>Special notes, e.g. for repairs</p>


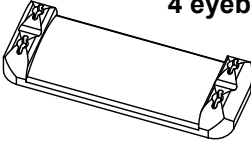

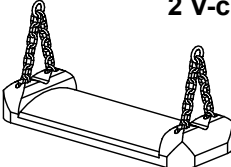

Spare Parts

Big Triple Swing special

Order No. 6.18020



Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

Order No. Spare part of swing seat	Order No. Spare part of stork's nest
<p>0.93000 rubber swing seat</p> 	<p>0.86100 stork nest without joints</p> 
<p>0.93010 rubber swing seat with 4 eyebolts</p> 	<p>0.86101 stork nest with joints and chains</p> 
<p>0.93020 rubber swing seat with 2 V-chains</p> 	<p>0.20012 stainless steel machine bolt M12x70 reinforced, with locking nut</p> 
<p>0.93021 V-chain</p> 	<p>0.88193 square block bar, reinforced with 2 brass bushes</p> 
<p>0.93090 U-shackle with swivel</p> 	<p>0.88140 brass bush</p> 
<p>0.88150 brass bush for swing joint</p> 	
<p>0.20010 stainless steel machine bolt M8x55 with locking nut</p> 	
<p>0.20020 stainless steel machine screw M8x28 with locking nut</p> 	