

Instructions for wear checks of play equipment

The equipment must be checked for correct operation and safety, especially the points listed below:

Proof of maintenance

Playground.....

Date of installation


Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.

Intervals for maintenance work and checks generally depend on

- location
- usage
- frequency of use
- possible vandalism

For more details see also our general instructions for maintenance of playgrounds!

Swing Scales Order No. L6.10200

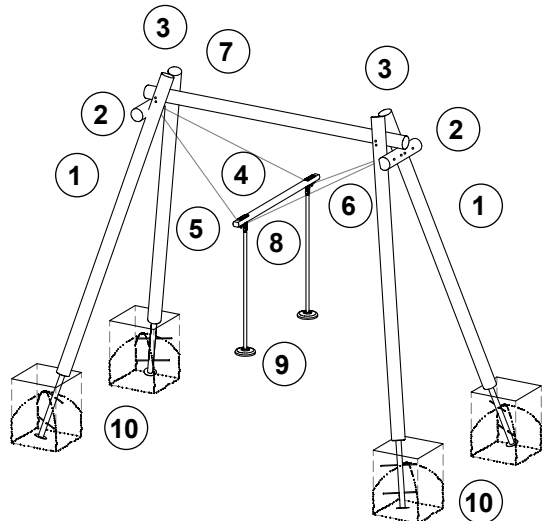

Wooden parts

1. Check for rot and, if necessary, smooth out splinters and round off sharp edges of cracks.
2. Check that all bolts and screws are tight and retighten if necessary.
3. **Recommendation:** apply paraffin wax to the upper end grain areas once a year, please refer to Order No. 0.90100, 1 litre.

Joints

4. Make sure that the swivels move smoothly, apply grease if required.
5. Check connection to wood, tie joint must have a snug fit.

Ropes and rope connections

6. Check ropes for wear and tear, if the steel reinforcement is damaged, it is imperative it be replaced.
7. Check the connection of the rope, lightly oil during each maintenance.

Pendulum seat suspension

8. Check chain and connection to chain; the first chain link must be locked; check wear on contact surfaces between first and second chain link.
9. Renew the pendulum seats if metal core is visible.

Structural stability

10. In order to check for rot at wooden parts and steel feet for corrosion, uncover the foundations once a year.

Repair not carried out, it is still possible to play on equipment

Repair not carried out, equipment is taken out of action

All work carried out, everything is in order

Maintenance carried out by:

..... Date

Special notes, e.g. for repairs