

Instructions for wear checks of play equipment

The equipment must be checked for correct operation and safety, especially the points listed below:

Proof of maintenance

Playground.....

Date of installation


Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.

Intervals for maintenance work and checks generally depend on


- location
- usage
- frequency of use
- possible vandalism

For more details see also "General instructions for maintenance of playgrounds".


Small Acrobat Rig Order No. L7.66000

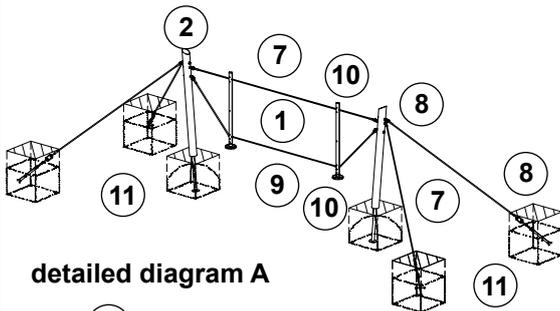

detailed diagram A

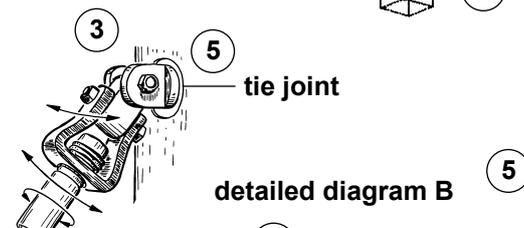


detailed diagram B

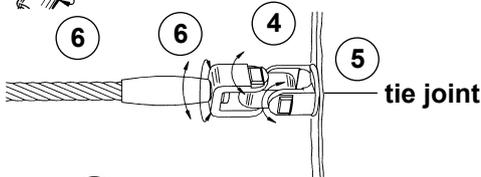

detailed diagram C

re-tension here

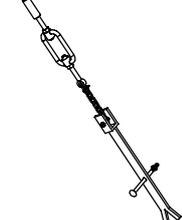

Wooden parts

1. Check for rot and, if necessary, smooth out splinters and round off sharp edges of cracks.
2. Recommendation: apply paraffin wax to the upper end grain areas once a year, please refer to order No. 0.90100, 1 litre.

Joints

3. Check that the upper ball bearings move smoothly (see detailed diagram A).
4. Check that the lower swivel within the universal joint moves smoothly (see diagram D), apply small amount of grease if required.
5. Check connection to wood, the tie joint must fit closely (see detailed diagram A + B).
6. Check that cable connections move smoothly, oil them at each inspection.

Ropes

7. Check for wear & tear, if the steel reinforcement is damaged, it is imperative it be replaced.
8. Check that the upper connections of the tensioning ropes are tight, the ropes must be taut – retighten if necessary (see detailed diagram B) shorten the chain if necessary

Pendulum seats

9. Replace if the metal disc is exposed.
10. Check the connections of the round poles to the upper and lower rope.

Structural stability

11. Uncover the foundation once a year in order to check for rot or the steel feet for corrosion.

Repair not carried out, it is still possible to play on equipment

Repair not carried out, equipment is taken out of action


All work carried out, everything is in order

Maintenance carried out by:



..... Date

Special notes, e.g. for repairs

Spare Parts
Small Acrobat Rig
Order No. L7.66000

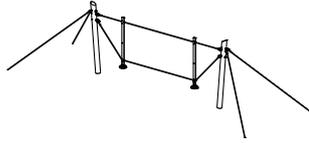

Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

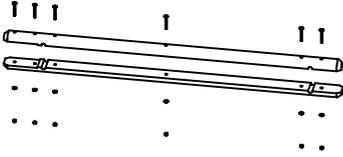Order No.	Spare part	
0.94113	pendulum seat without disc 	
99.01253	round pole slotted and pre-drilled 	
99.01327	suspension gear, complete without square block steel 	