
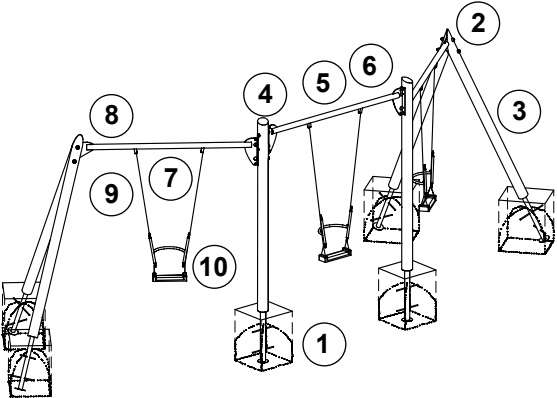
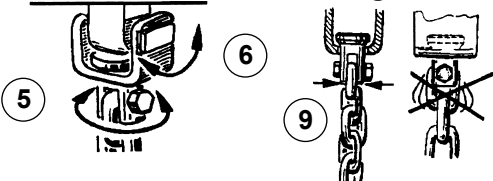
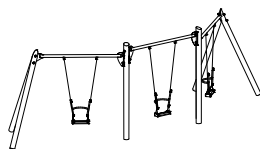




Instructions for wear checks of play equipment	The equipment must be checked for correct operation and safety, especially the points listed below:	Proof of maintenance
<p>Playground.....</p> <p>Date of installation</p> <p>Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.</p> <p>Intervals for maintenance work and checks generally depend on</p> <ul style="list-style-type: none"> - the location - the usage - the frequency of use - possible vandalism <p>For more details see also "General instructions for maintenance of playgrounds".</p> <p>Triple Swing special Order No. 6.17502</p>  <p>detailed diagram</p>  <p>Note The first chain link must be locked firmly in the swivel.</p> <p>For spare parts refer to back of page.</p>	<p>Structural stability</p> <ol style="list-style-type: none"> Uncover the foundations once a year in order to check the structural stability as follows: <ul style="list-style-type: none"> - steel for corrosion - anchoring to the ground for stability - condition of concrete foundations Check all bolts and screws are tight and retighten if necessary. Re-galvanise protruding threads using galvanising spray, if necessary. <p>Wooden parts</p> <ol style="list-style-type: none"> Check for rot and, if necessary, smooth out splinters and round off sharp edges and cracks. Recommendation: apply paraffin wax to the end grain areas once a year, especially near the ground; please refer to order No. 0.90100, 1 litre. <p>Metal/fittings</p> <ol style="list-style-type: none"> Check that joints can move smoothly in both directions (see detailed diagram). Make sure that the swivels move smoothly, apply small amount of grease if required, see detailed diagram. Check drop-forged joint yoke – the opening must be parallel to the metal cross beam, tie joint must fit closely. Check welding seams on the metal cross bar for cracks. Check the chains and the connections to the chains; the first chain link must be locked; check wear on contact surfaces between first and second chain link, see detailed diagram. Check safety bar for damage. <p>Repair not carried out, it is still possible to play on equipment</p> <p>Repair not carried out, equipment is taken out of action</p> <p>All work carried out, everything is in order</p> <p>Maintenance carried out by:</p> <p>Date</p>	<p>Special notes, e.g. for repairs</p>

Spare parts
Triple Swing
special
Order No. 6.17502

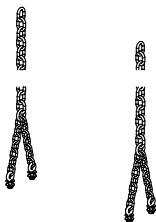

Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts.**

Order No. Spare part	Order No. Spare part
<p>0.88160 brass bush for square block steel</p> 	<p>0.93090 U-shackle with swivel</p> 
<p>0.88190 square block steel with 2 brass bushes without bolts</p> 	<p>0.20010 stainless steel bolt M8 x 55</p> 
<p>0.93150 universal joint</p> 	<p>0.20020 stainless steel bolt M8 x 28 with locking nut</p> 
<p>0.93160 pair of chains, 6 mm length 1.97 m</p>	
<p>0.93170 pair of chains, 6 mm length 1.83 m</p> 	
<p>0.93195 swing seat with safety bar and chains length 1.83 m</p>	
<p>0.93205 swing seat with safety bar and chains length 1.97 m</p>	
	<p>Note This list includes only the spare parts ordered most frequently. Other spare parts on request.</p>