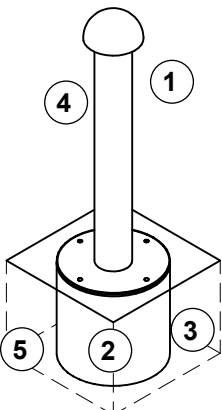






Instructions for wear checks of play equipment		The equipment must be checked for correct operation and safety, especially the points listed below:		Proof of maintenance	
Playground..... Date of installation Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year. Intervals for maintenance work and checks generally depend on - location - usage - frequency of use - possible vandalism For more details see also our general instructions for maintenance of playgrounds! Water Push Button Order No. 5.18020 / 5.18022 		Function - Make sure the pump mechanism moves smoothly. - Check water hoses for wear and tear; replace if necessary. To do this, loosen lid bolts (Allen key No. 4) and remove upper part including pump mechanism. - Clean sieve of pressure reduction valve if soiled. Valve and cartridge - When replacing the entire valve or the cartridge, pump several times until the automatic shutoff engages (if necessary, shut off the water several times and then turn on again). Structural stability - Check anchoring to the ground every 12 months, retighten screws and bolts if necessary. Note Prior to the start of the frost period, turn off water supply and remove the mushroom pump. It is necessary to remove at least the upper part. If the housing part is to remain on site, close it with the winter lid. If a programmable rinsing device (No. 5.18022) is fitted, the time switch is particularly vulnerable to frost damage as it cannot be drained. Therefore, it is imperative the pump be dismantled. Store the pump protected from frost.		<input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/> <input style="width: 40px; height: 20px; margin-right: 10px;" type="checkbox"/>	

Spare parts Water Push Button Order No. 5.18020 / 5.18022		Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to only use original parts .	
Order No.	Spare parts		
0.97833	Self-righting pressure valve (valid until June 2022) <i>please request repair instructions for replacement</i>	0.97842	Replacement cartridge for self-righting pressure valve (valid from Mai 2024) <i>please request repair instructions for replacement</i>
			
0.97834	Replacement cartridge for self-righting pressure valve (valid until June 2022) <i>please request repair instructions for replacement</i>	0.97835	Connecting hose with hose protection
			
0.97832	Self-righting pressure valve (valid June 2022 until May 2024) <i>please request repair instructions for replacement</i>	0.97836	Pressure reducer
			
0.97838	Replacement cartridge for self-righting pressure valve (valid June 2022 until May 2024) <i>please request repair instructions for replacement</i>	0.97837	Seal for hose connection
			
0.97841	Self-righting pressure valve (valid from May 2024) <i>please request repair instructions for replacement</i>	0.97840	Winter lid
	